

# Quick Guide

## 1 About Meron

The Meron is a user-friendly accessory for viewing live TV content on Android and Apple™ devices, and is compatible with DVB-T and ISDB-T (1-Seg and Full-Seg) digital TV transmissions. Meron does not need an internet connection and does not consume cellular data airtime. It receives the TV signal from the free-to-air TV transmission and sends it to your device via WiFi. Simply download the free SianoTV application from the App Store or Google Play, connect to Meron, watch TV and enjoy.

### 1.1 Highlights

- View live TV (DVB-T and ISDB-T broadcasts) on your Android and Apple smartphone or tablet
- Pause, rewind, and record programs while viewing
- Equipped with internal battery for over 4 hours of viewing time without external power. You can also watch TV and charge at the same time.

### 1.2 Requirements

- Supports the following Apple devices: iPad 2, New iPad (3), iPad 4, iPad Mini, iPhone 4S (not 4), iPhone 5, and iPod 5. The device must have an iOS 5.1.X or newer
- Designed for use with advanced Android devices using Android 4.0.3 or newer, such as Samsung Galaxy S2/S3/S4, Note/Note2/Note3, Tab-2 (not 1), Google Nexus 7, Asus TF300, HTC One X , HTC One S and other devices (*Meron was tested with a select list of manufacturers and models only*)

## 2 Safety Instructions

- Read this entire Quick Guide to ensure proper usage.
- Keep this Quick Guide handy for future reference.
- Do not use the Meron while driving, cycling, or operating any moving vehicle or apparatus. This is dangerous and may result in a traffic violation and may be illegal in some areas.
- Keep the Meron away from all liquids and liquid-prone locations such as sinks, bathtubs, rain, and other sources of moisture. Moisture can cause electric shock as with any electronic device.
- Clean the Meron with a soft lint-free cloth.
- Do not allow children under the age of 6 to use the Meron unsupervised.
- Never force any connector into the Meron's USB and antenna ports. Ensure that your connectors are the identical shape and size before you connect.
- Do not disassemble, crush, short-circuit or incinerate the Meron battery, as it may cause fire, injury, burns or other hazards.

### 3 Disposal Instructions

Do not dispose of the device with unsorted waste. Improper disposal may be harmful to the environment and to your health. Consult with your local waste authority for information on collection and recycling programs in your area.

### 4 Package Contents

- Meron mobile TV receiver
- Telescopic antenna
- USB charging cable
- Operating Instructions

### 5 Installation Instructions

1. Charge the Meron fully before initial operation:
  - a. Connect the charger to the Meron and to any USB power supply. The red “Charge” LED turns on.
  - b. When the Meron is fully charged, the “Charge” LED turns off
2. Download and install the free SianoTV application from the [App Store](#) or [Google Play](#)
3. Operate the Meron:
  - a. Fully extend the antenna
  - b. Position the Meron outdoors or on a window ledge for maximum reception
  - c. Turn on the Meron using the ON/OFF switch. The blue “ON” LED flashes and then stabilizes.
4. Set up the WiFi connectivity on your mobile device’s settings/connectivity manager
  - a. Use your mobile device at a maximum of 7 meters distance from the Meron
  - b. Go to the Network Manager on your mobile phone or tablet and search for the “Meron” network
  - c. Enter the password – “Meron” (with a capital ‘M’)
5. Activate the “SianoTV” application
6. For initial use only, channels must be scanned; go to SianoTV > Select Settings > Choose your location > Scan Channels
7. Once the channel scan is complete, press DONE
8. Select “Live TV”, press and watch TV channels. To switch from one channel to another, swipe fingertips over the screen either right or left

**Notes:**

- a. Reception inside buildings may be sub-optimal; we recommend placing Meron near a window.
- b. Application may ask for a “Firmware Update”. If requested, accept the request. Meron will reboot and when complete, continue with No. 6 (above) - Scan Channels.
- c. Using more than one device with Meron? We recommend selecting “Forget” Meron network on previous device’s WiFi manager before connecting Meron to another device.